


# Backup Battery User Instructions

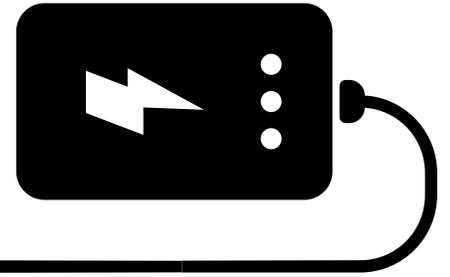

## Introduction

These instructions are for the **EcoFlow Delta Pro** battery system. Please use the instructions for the Delta 2 Max if you received that battery.




## 1 Get Unpacked

Use caution! This device is **very heavy**. If possible, use the handle to roll it to where you need it.


### What's in the box?

Along with your battery, you'll find some cables in a smaller box. The only one you need for now is the charging cable.

#### AC Charging Cable

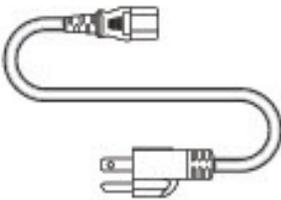

# Backup Battery User Instructions

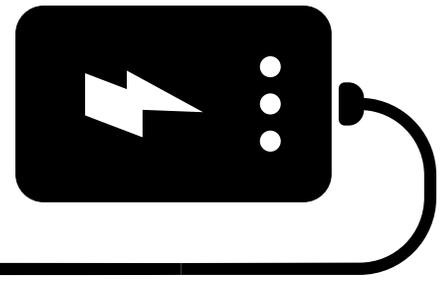

Lift the flap on the back to plug in the battery.

2

## Get Connected

### How do I plug it in?


- Move the battery near a wall outlet.
- Locate the cord access panel by lifting the flap on the back.
- Plug the AC charging cable into the back of the battery.
- Plug the other end directly into the wall.
- **Important!** Do not plug into a power strip, extension cord, or similar device.



Got it plugged in?  
Leave it plugged in.

Leaving the battery plugged in ensures it is ready to go at full power when the power goes out.

# Backup Battery User Instructions

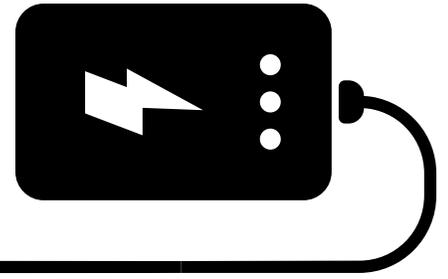

3

## Use Your Battery

**Important:** Always remember to turn on the AC outlets!

### Power Your Medical Devices

1. Plug your devices into any of the four front AC outlets.
2. **Turn on the AC outlets by pressing the AC Power Button.** Don't skip this step, otherwise your devices will not stay powered on when the power goes out.



### Care for the Battery


- Use or store the Delta Pro battery at room temperatures. Avoid rooms or spaces that get very hot or very cold.
- Unplug the battery from the wall until it gets down to 30% and then plug it back in every few months.



Did the display go blank?

The display goes blank after 5 minutes. Press the yellow button on the front to turn it on again.

# Backup Battery User Instructions

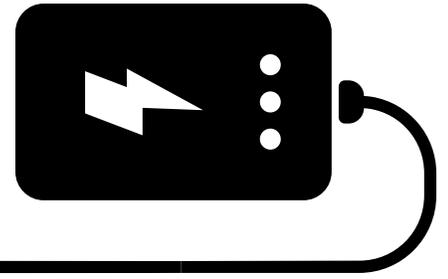


## If Something Goes Wrong...

### Register for Warranty Support

- Find warranty instructions card included in the box. It should be with the instruction manual.
- Follow the instructions on the card to register your device. Registering activates the warranty.
- You can find the serial number on the bottom of your battery.
- You can activate the device warranty online:

[www.ecoflow.com/us/support/warranty](http://www.ecoflow.com/us/support/warranty)

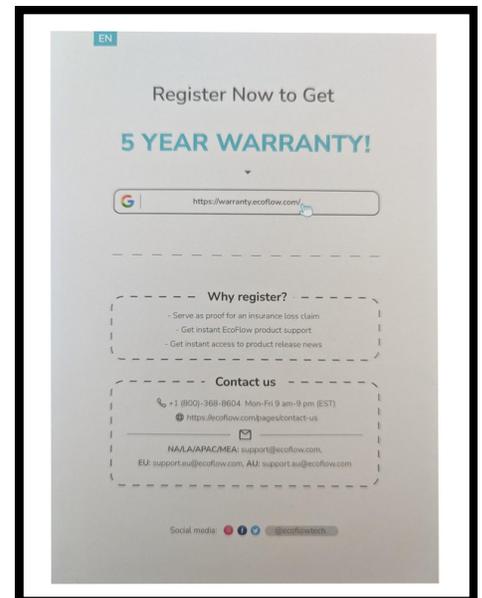

**Web:** [www.ecoflow.com/us/support](http://www.ecoflow.com/us/support)

**Email:** [support@ecoflow.com](mailto:support@ecoflow.com)

**Phone:** (800)-368-8604

**Youtube:** [www.youtube.com/@EcoFlowSupport](http://www.youtube.com/@EcoFlowSupport)

For questions about the Surviving in Place backup battery program, contact Julia Beems at [julia.beems@ucdenver.edu](mailto:julia.beems@ucdenver.edu).